



Europe / Middle East / Africa

FUJIFILM Optical Devices Europe GmbH

Fujistr. 1, 47533 Kleve, Germany
TEL: +49 (0)2821 / 7115-400 FAX: +49 (0)2821 / 7115-200
<http://www.fujifilm.eu/fujinon>
E-mail: cctv_eu@fujifilm.com

FUJIFILM Middle East

Downtown Jebel Ali
Dubai, UAE
TEL: +971-52-1056367
<http://www.fujifilm-mea.com/en/products/optical-devices>

Japan / North East Asia

FUJIFILM Corporation

Optical Device & Electronic Imaging Products Div.
1-324 Uetake, Kita-ku, Saitama City Saitama, 331-9624, Japan
TEL: +81-48-668-2152 FAX: +81-48-667-7924
<https://www.fujifilm.com/jp/ja/>

China

**FUJIFILM (China) Investment Co., Ltd.
Optical Device Business Division**

28F, Shanghai ONELUJIAZUI, No.68 YinCheng Road(M),
Pudong New Area, Shanghai, P.R.China 200120
TEL: +86-21-5010-6000 *384 FAX: +86-21-5010-6730
<http://www.fujifilm.com.cn>

Hong Kong / Taiwan

**FUJIFILM Hong Kong Limited
Optical Device Division**

Unit 1908-1911, 19/F., CDW Building,
388 Castle Peak Road, Tsuen Wan, N.T., Hong Kong
TEL: +852-2376-0998 FAX: +852-2724-1118

Southeast Asia & West Asia

FUJIFILM ASIA PACIFIC PTE LTD.

10 New Industrial Road, Fujifilm Building, Singapore 536201
TEL: +65-6383-9933 FAX: +65-6383-5666
<http://www.fujifilm.com.sg/>

Oceania

FUJIFILM AUSTRALIA PTY LTD

54 Waterloo Road, Macquarie Park, N.S.W. 2113, Australia
TEL: +61-2-9466-2600 FAX: +61-2-9466-2621
<http://www.fujifilm.com.au/>

North & Latin America

**FUJIFILM North America Corporation
Optical Devices Division**

10 High Point Drive, Wayne, NJ 07470
TEL: +1-973-633-5600 FAX: +1-973-633-5216
<http://www.fujifilmusa.com>



Authorized Fujifilm

Gamma Commerciale Srl
www.gammacommerciale.it
+39 029815404



FUJINON



Machine Vision Lenses

CF-ZA-1S series, 1.1"-4/3"*1, 2.5μm, 23MP



High Relative Illumination

- The advancement of image sensors for Machine Vision tends to larger sensors and smaller pixels. These sensors require a strong light transmission and a small Chief Ray Angle (CRA) so that the sufficient light reaches vertically on the photodiodes of each pixel. CF-ZA-1S series adopts rear lens groups with a large diameter enabled by FUJINON's high-precision assembly technology and achieves a CRA below 5°. This guarantees a high relative illumination across the entire image without vignetting.
- This series eliminates the need for luminance correction with image processing that just amplifies the noise.

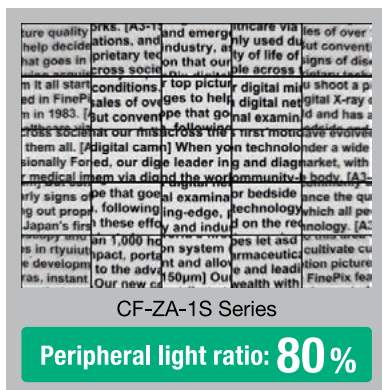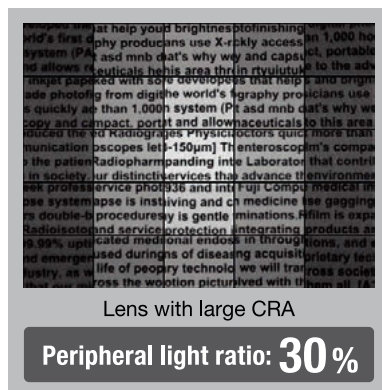


4D High Resolution performance

- Thanks to the 4D High Resolution Design, the resolving power remains consistently high from the center of the image to the edges, even at changing working distances or aperture settings.
- The CF-ZA-1S series draws out the full capability of cameras equipped with a 1.1" sensor with 3.45 μm pixel pitch (equivalent to 12 MP) across the entire frame. These lenses are the perfect choice especially for IMX253 (1.1" type sensor) and IMX225 (1" type sensor).
- The series supports next generation sensors with 1.1" optical format and 2.5μm pixel pitch (equivalent to 23 MP).

"4D High Resolution" lenses

General machine vision camera

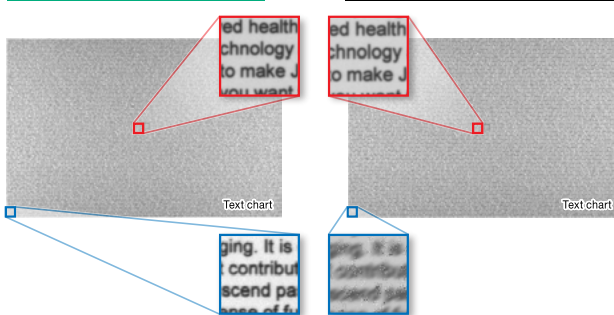


Anti-Vibration and Shock Design

- This series maintains an advanced level of resolution before and after tough vibration tests, conducted according to JIS C 60068-2-6*2. Even in applications that involve shocks, such as robot vision and 3D scanners, the optical axis shift remains less than 10μm for shocks of up to 10G*3.
- The Fujifilm original mechanical design*4 minimizes the use of adhesive to avoid aged deterioration caused by humidity and heat.

High usability and reliability

- These lenses come with knurled screws for fixing the iris and focus position. The screws can't fall out accidentally, get lost or damage sensitive manufacturing machines during installation or maintenance.

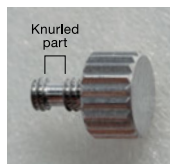

Compact size of only 39mm outer diameter

- Despite the support of sensors with large 1.1" format, all models of the CF-ZA-1S series offer a uniform diameter of only 39mm and are therefore no larger than standard machine vision cameras. Only the 8mm focal length CF8ZA-1S is slightly larger with a diameter of 54mm in the front lens.




- Thanks to the 3 holes on the lens barrel for fixing iris and focus positions, the most suitable hole can be selected for each application.
- By adopting an internal mechanical focus, the overall length of lens will not change when focused.
- The introduction of a focusing indicator at the working distance of 50cm enables efficient detection of cameras' flange back deviation.




	Anti Shock & Vibration CF8ZA-1S	Anti Shock & Vibration CF12ZA-1S	Anti Shock & Vibration CF16ZA-1S	Anti Shock & Vibration CF25ZA-1S	Anti Shock & Vibration CF35ZA-1S	Anti Shock & Vibration CF50ZA-1S
Focal length [mm]	8	12	16	25	35	50
Iris range [F. no]	F1.8-F16	F1.8-F16	F1.8-F16	F1.8-F16	F1.8-F16	F2.4-F16
Angle of view	85.7°×67.5°	62.5°×47.8°	47.3°×36.1°	32.9°×24.8°	23.0°×17.3°	16.6°×12.5°
Working Distance*1 [mm]	∞-100	∞-100	∞-100	∞-100	∞-200	∞-200
Operation of focus	Manual	Manual	Manual	Manual	Manual	Manual
Operation of iris	Manual	Manual	Manual	Manual	Manual	Manual
Filter thread [mm]	M52×0.75	M37.5×0.5	M37.5×0.5	M37.5×0.5	M37.5×0.5	M37.5×0.5
Mount	C-mount	C-mount	C-mount	C-mount	C-mount	C-mount
Weight (approx.) [g]	180	180	180	170	165	155
Sensor size (std.)*2	1.1"(2.5μm)	1.1"(2.5μm)	1.1"(2.5μm)	1.1"(2.5μm)	1.1"(2.5μm)	1.1"(2.5μm)
Sensor size (max.)*3	1.2"(2.74μm)	1.2"(2.74μm)	1.2"(2.74μm)	4/3"(3.45μm)	4/3"(3.45μm)	4/3"(3.45μm)
CRA (Chief Ray Angle)	4.5	4.5	4.9	2.7	4.5	4.8
TV distortion [%]	-4.81	-2.82	-0.80	-0.83	-0.32	-0.17
Dimension [mm]	ø54×67	ø39×67.6	ø39×67.6	ø39×67.3	ø39×67.3	ø39×68


CF8ZA-1S

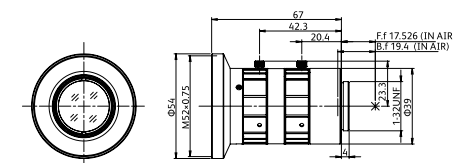


CF12ZA-1S

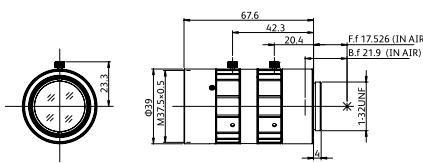


CF16ZA-1S

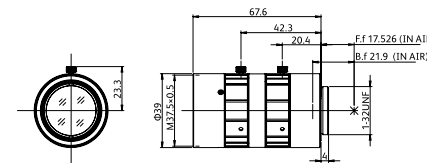


CF25ZA-1S

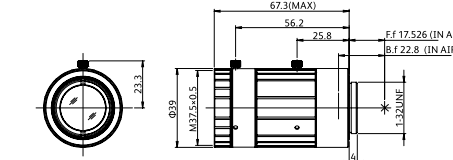

CF35ZA-1S

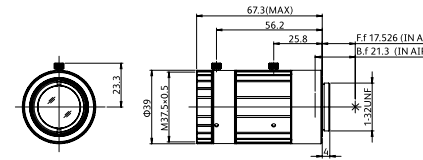

CF50ZA-1S

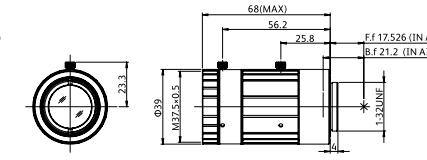

FUJINON Lens Shooting Range Chart

CF-ZA-1S series

CF8ZA-1S

Working Distance [mm]	Optical Magnification	Extension Tube [mm]	Field of View [mm]					
			1,1"		1"		2/3"	
			H	V	H	V	H	V
1000	0,008x	-	1888,5	1361,5	1684,7	1221,8	1112,6	822,2
950	0,009x	-	1795,5	1294,5	1601,8	1161,6	1057,8	781,7
900	0,009x	-	1702,5	1227,4	1518,8	1101,4	1003,0	741,2
850	0,010x	-	1609,6	1160,3	1435,9	1041,2	948,2	700,7
800	0,010x	-	1516,6	1093,3	1352,9	981,0	893,4	660,2
750	0,011x	-	1423,6	1026,2	1269,9	920,9	838,6	619,7
700	0,012x	-	1330,6	959,2	1187,0	860,7	783,7	579,1
650	0,013x	-	1237,7	892,1	1104,0	800,5	728,9	538,6
600	0,014x	-	1144,7	825,0	1021,1	740,3	674,1	498,1
550	0,015x	-	1051,7	758,0	938,1	680,1	619,3	457,6
500	0,016x	-	958,7	690,9	855,2	619,9	564,5	417,1
450	0,018x	-	865,8	623,9	772,2	559,8	509,7	376,6
400	0,020x	-	772,8	556,8	689,2	499,6	454,9	336,1
350	0,023x	-	679,8	489,7	606,3	439,4	400,1	295,6
300	0,026x	-	586,8	422,7	523,3	379,2	345,2	255,0
250	0,031x	-	493,8	355,6	440,3	319,0	290,4	214,5
200	0,039x	-	400,8	288,5	357,3	258,8	235,6	174,0
150	0,050x	-	307,8	221,4	274,4	198,6	180,8	133,5
100	0,073x	-	214,8	154,3	191,3	138,4	125,9	92,9

CF12ZA-1S

Working Distance [mm]	Optical Magnification	Extension Tube [mm]	Field of View [mm]					
			1,1"		1"		2/3"	
			H	V	H	V	H	V
1000	0,012x	-	1238,5	906,0	1112,2	815,2	743,6	551,4
950	0,013x	-	1177,7	861,5	1057,6	775,1	707,1	524,3
900	0,013x	-	1116,9	817,1	1003,0	735,1	670,6	497,2
850	0,014x	-	1056,2	772,6	948,4	695,1	634,1	470,2
800	0,015x	-	995,4	728,1	893,8	655,0	597,5	443,1
750	0,016x	-	934,6	683,6	839,3	615,0	561,0	416,0
700	0,017x	-	873,8	639,1	784,7	575,0	524,5	388,9
650	0,019x	-	813,1	594,6	730,1	535,0	488,0	361,8
600	0,020x	-	752,3	550,1	675,5	494,9	451,5	334,7
550	0,022x	-	691,5	505,7	620,9	454,9	414,9	307,6
500	0,024x	-	630,7	461,2	566,3	414,9	378,4	280,6
450	0,026x	-	570,0	416,7	511,7	374,8	341,9	253,5
400	0,030x	-	509,2	372,2	457,1	334,8	305,4	226,4
350	0,034x	-	448,4	327,7	402,5	294,7	268,8	199,3
300	0,039x	-	387,6	283,2	347,9	254,7	232,3	172,2
250	0,046x	-	326,8	238,6	293,2	214,6	195,7	145,1
200	0,057x	-	265,9	194,1	238,6	174,6	159,2	118,0
150	0,074x	-	205,0	149,5	183,9	134,5	122,6	90,8
100	0,105x	-	144,0	104,9	129,1	94,3	86,0	63,7

CF16ZA-1S

Working Distance [mm]	Optical Magnification	Extension Tube [mm]	Field of View [mm]					
			1,1"		1"		2/3"	
			H	V	H	V	H	V
1000	0,016x	-	896,4	667,9	811,0	603,4	552,2	412,4
950	0,017x	-	852,6	635,2	771,3	573,9	525,1	392,2
900	0,018x	-	808,7	602,5	731,6	544,3	498,1	372,0
850	0,019x	-	764,8	569,7	691,9	514,8	471,0	351,8
800	0,020x	-	721,0	537,0	652,2	485,2	444,0	331,6
750	0,021x	-	677,1	504,3	612,5	455,7	416,9	311,4
700	0,023x	-	633,2	471,6	572,8	426,1	389,9	291,2
650	0,025x	-	589,4	438,9	533,1	396,5	362,8	271,0
600	0,026x	-	545,5	406,2	493,4	367,0	335,8	250,7
550	0,029x	-	501,6	373,5	453,7	337,4	308,7	230,5
500	0,032x	-	457,7	340,8	414,0	307,8	281,7	210,3
450	0,035x	-	413,8	308,0	374,2	278,3	254,6	190,1
400	0,039x	-	369,9	275,3	334,5	248,7	227,5	169,9
350	0,044x	-	326,0	242,6	294,8	219,1	200,5	149,6
300	0,051x	-	282,1	209,8	255,0	189,5	173,4	129,4
250	0,061x	-	238,1	177,0	215,2	159,9	146,3	109,2
200	0,075x	-	194,1	144,2	175,4	130,2	119,1	88,9
150	0,097x	-	150,0	111,4	135,5	100,6	92,0	68,6
100	0,138x	-	105,7	78,4	95,4	70,7	64,7	48,2

CF25ZA-1S

Working Distance [mm]	Optical Magnification	Extension Tube [mm]	Field of View [mm]					
			1,1"		1"		2/3"	
			H	V	H	V	H	V
1000	0,024x	-	604,4	450,8	546,9	407,5	373,0	278,9
950	0,025x	-	574,8	428,7	520,1	387,5	354,7	265,2
900	0,026x	-	545,2	406,6	493,4	367,6	336,5	251,5
850	0,028x	-	515,6	384,5	466,6	347,6	318,2	237,9
800	0,030x	-	486,0	362,5	439,8	327,6	299,9	224,2
750	0,031x	-	456,4	340,4	413,0	307,7	281,6	210,5
700	0,034x	-	426,8	318,3	386,2	287,7	263,4	196,9
650	0,036x	-	397,2	296,2	359,4	267,7	245,1	183,2
600	0,039x	-	367,6	274,1	332,6	247,8	226,8	169,5
550	0,043x	-	338,0	252,0	305,8	227,8	208,5	155,9
500	0,047x	-	308,4	229,9	279,0	207,8	190,2	142,2
450	0,052x	-	278,7	207,8	252,2	187,8	171,9	128,5
400	0,058x	-	249,1	185,6	225,3	167,8	153,6	114,8
350	0,066x	-	219,4	163,5	198,5	147,8	135,3	101,1
300	0,076x	-	189,7	141,3	171,6	127,7	116,9	87,4
250	0,090x	-	159,9	119,1	144,6	107,6	98,5	73,6
200	0,111x	-	130,0	96,8	117,6	87,5	80,1	59,8
150	0,144x	-	100,0	74,4	90,4	67,2	61,5	46,0
100	0,208x	-	69,5	51,6	62,8	46,6	42,7	31,9

CF35ZA-1S

Working Distance [mm]	Optical Magnification	Extension Tube [mm]	Field of View [mm]					
			1,1"		1"		2/3"	
			H	V	H	V	H	V
1000	0,034x	-	419,8	314,5	380,6	284,6	260,7	195,3
950	0,036x	-	399,4	299,2	362,1	270,8	248,0	185,8
900	0,038x	-	379,0	283,9	343,5	256,9	235,3	176,2
850	0,040x	-	358,5	268,6	325,0	243,0	222,6	166,7
800	0,042x	-	338,1	253,2	306,5	229,2	209,9	157,2
750	0,045x	-	317,6	237,9	287,9	215,3	197,2	147,7
700	0,048x	-	297,2	222,6	269,4	201,4	184,5	138,2
650	0,051x	-	276,7	207,2	250,8	187,5	171,8	128,6
600	0,056x	-	256,2	191,9	232,3	173,6	159,1	119,1
550	0,060x	-	235,8	176,5	213,7	159,7	146,3	109,6
500	0,066x	-	215,3	161,2	195,1	145,8	133,6	100,0
450	0,073x	-	194,7	145,8	176,5	131,9	120,8	90,5
400	0,082x	-	174,2	130,4	157,9	118,0	108,1	80,9
350	0,093x	-	153,6	115,0	139,2	104,0	95,3	71,3
300	0,107x	-	133,0	99,5	120,5	90,0	82,5	61,7
250	0,127x	-	112,3	84,0	101,8	76,0	69,6	52,1
200	0,156x	-	91,5	68,4	82,9	61,9	56,7	42,4
150	0,201x	1,5	71,0	53,1	64,3	48,0	44,0	32,9
100	0,282x	5	50,8	38,0	46,0	34,3	31,4	23,5

CF50ZA-1S

Working Distance [mm]	Optical Magnification	Extension Tube [mm]	Field of View [mm]					
			1,1"		1"		2/3"	
			H	V	H	V	H	V
1000	0,048x	-	296,6	222,6	269,0	201,5	184,6	138,4
950	0,050x	-	282,0	211,6	255,8	191,5	175,5	131,5
900	0,053x	-	267,3	200,6	242,5	181,6	166,4	124,7
850	0,056x	-	252,7	189,6	229,2	171,6	157,3	117,9
800	0,059x	-	238,0	178,6	215,9	161,7	148,2	111,0
750	0,063x	-	223,4	167,6	202,6	151,7	139,0	104,2
700	0,068x	-	208,7	156,6	189,3	141,7	129,9	97,3
650	0,073x	-	194,0	145,6	176,0	131,8	120,7	90,5
600	0,079x	-	179,3	134,5	162,7	121,8	111,6	83,6
550	0,086x	-	164,6	123,5	149,3	111,8	102,4	76,8
500	0,095x	-	149,9	112,5	136,0	101,8	93,3	69,9
450	0,105x	-	135,2	101,4	122,6	91,8	84,1	63,0
400	0,118x	-	120,4	90,3	109,2	81,7	74,9	56,1
350	0,134x	-	105,5	79,1	95,7	71,6	65,6	49,2
300	0,157x	-	90,6	67,9	82,2	61,5	56,3	42,2
250	0,188x	-	75,6	56,6	68,5	51,3	47,0	35,2
200	0,236x	-	60,3	45,2	54,6	40,9	37,5	28,1
150	0,308x	5	46,1	34,5	41,8	31,2	28,6	21,4
100	0,414x	10	34,3	25,7	31,1	23,3	21,3	16,0

HF-12M series

HF818-12M

Working Distance [mm]	Optical Magnification	Extension Tube [mm]	Field
--------------------------	-----------------------	------------------------	-------